

Datasheet Maraging steel

Osprey® MAR-50 Co free

Osprey® MAR-50 Co-free* is a maraging steel free of cobalt, with reduced amount of nickel and an addition of chromium. This alloy also comes in titanium-free variants for improved polishability.

Powder designed for

Additive Manufacturing (AM)



Product description

Osprey® MAR-50 Co-free* is a maraging steel free of cobalt, with reduced amount of nickel and an addition of chromium, to obtain a nearly fully martensitic microstructure already in the Laser - Powder Bed Fusion (L-PBF) as-built condition. We also offer titanium-free variants of this alloy for improved polishability. For more information about titanium-free Osprey® MAR-50 Co-free, please contact us.

Osprey® MAR-50 Co-free is typically used for conformal-cooled mould tooling and rubber-tyre mould (sipes) applications. This alloy has been developed using the latest metallurgical modelling systems. It can be directly aged to achieve levels of material performances including strength, hardness and toughness comparable to the conventional 18Ni300 maraging steel.

This metal powder is manufactured by either induction melting under Vacuum Inert Gas Atomization (VIGA) or melting under argon prior to Inert Gas Atomization (IGA), producing a powder with a spherical morphology which provides good flow characteristics and high packing density. In addition, the powder has a low oxygen content and low impurity levels, resulting in a metallurgically



clean product with enhanced mechanical performance.

Chemical composition (nominal), %

Last updated: Jul 17, 2023 1:46 PM CET

•	
Fe	Bal.
С	≤0.06
Cr	4.0
Ni	9.5
Мо	4.5
Со	≤0.1
Ті	≤1.0
Al	≤0.3
Mn	≤0.5
Si	≤0.5
Р	≤0.03
S	≤0.03

Powder characteristics and morphology Powder for Additive Manufacturing

Osprey® metal powder for Additive Manufacturing is characterized by a spherical morphology and high packing density, which confer good flow properties. For powder bed processes these are essential when applying fresh powder layers to the bed to ensure uniform and consistent part build.

For blown powder processes, such as Direct Energy Deposition (DED), good flow ensures uniform build rates. Tight control of the particle size distribution also helps ensure good flowability. Low oxygen powders result in clean microstructures and low inclusion levels in the finished parts.


^{*}This alloy is sometimes referred to as Fe9Ni5Cr1.4Mo0.7Ti



Particle size distribution

Powder for Additive Manufacturing

Osprey® metal powder for Additive Manufacturing is available in a wide range of particle size distributions that are tailored to the individual Additive Manufacturing systems. They can also be tailored to the particular requirements of the end application, both in terms of mechanical performance and surface finish.

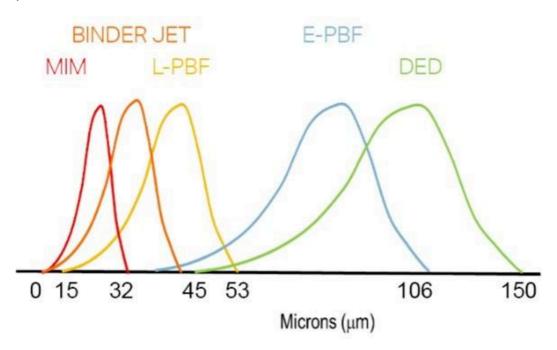


Typical particle size distributions for Additive Manufacturing.

Process technology	Size (µm)
Binder jetting	≤ 16, ≤ 22, ≤ 32, ≤ 38, ≤ 45
Laser - Powder Bed Fusion (L-PBF)	15 to 53 and 10 to 45
Electron beam - Powder Bed Fusion (E-PBF)	45 to 106
Direct Energy Deposition (DED)	53 to 150

Tailor-made particle size distributions are available on request. Contact us to discuss your specific requirements.




Microstructure

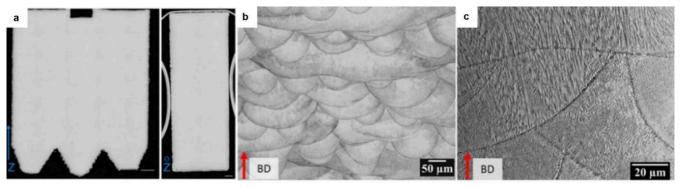

LOM micrographs: a) a low magnification profile of the cross-section along build direction and normal to build direction, b) chemically etched cross-section showing traces of the melt pools, c) higher magnification micrograph showing the ultrafine cellular/dendritic solidification structure.


The Electron Beam Back-scatter Diffraction (EBSD) analysis results confirm that the volume fraction of retained austenite (blue areas) is negligible in the as-built condition and the microstructure is essentially martensitic (red areas). This provides a suitable condition for direct ageing of the essentially martensitic as-built microstructure without the need for prior solution annealing.

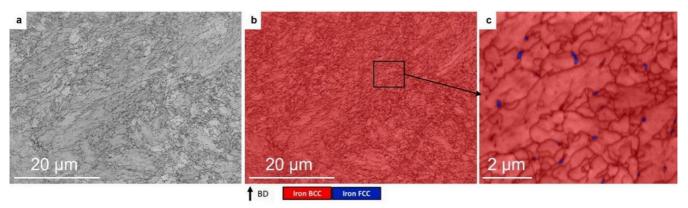

As-built sample: a) SEM micrograph of Osprey® Co-free maraging steel, b-c) EBSD analysis results, phase maps overlaid on band contrast images, low magnification scan higher magnification scan, respectively, showing the position of retained austenite



Mechanical properties

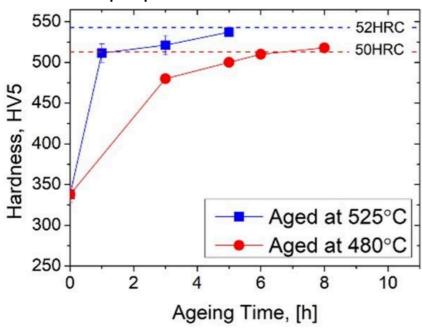

Hardness after ageing at 480 °C/896 °F and 525 °C/977 °F vs. time for samples directly aged.

Typical mechanical properties of material produced by Laser - Powder Bed Fusion (L-PBF) in asbuilt and directly aged conditions, evaluated at room temperature.

Direction	Ageing te mperature, °C	Ageing time, h	Yield strength (Rp0.2), MPa	Tensile strength (Rm), MPa	Elongation (ALO15), %	Area reduction, %	Hardness, HRC	Impact toughness (CVN*), J
Vertical	As built	N/A	1,075	1,095	19	74	35	190
Vertical	480	8.0	1,550	1,620	10	52	50-51	8
Horizontal	480	8.0	1,700	1,730	10.3	52	50-51	14
Direction	Ageing te	Ageing	Yield	Tensile	Elongation	Area	Hardness,	Impact
	mperature, °F	time, h	strength (Rp0.2), ksi	strength (Rm), ksi	(ALO15), %	reduction, %	HRC	toughness (CVN*), ft- Ib
Vertical		time, h	(Rp0.2),		l '	· ·	HRC 35	(CVN*), ft-
Vertical Vertical	°F	·	(Rp0.2), ksi	(Rm), ksi	%	%		(CVN*), ft-

^{*}CVN = Charpy V-Notched impact toughness test



About maraging steels

Maraging steels are a class of ultra-high strength, high hardness and high toughness steels which can be welded without preheating either in annealed (easy to machine) or heat-treated condition. These properties make them ideal candidates for the Laser - Powder Bed Fusion (L-PBF) process to manufacture parts with complex geometries for demanding applications which require an excellent combination of strength, toughness, and thermal stability.

The strengthening mechanisms in this type of steel differ from those in classical carbon steels where martensitic, bainitic or pearlitic phases are formed on cooling and tempering is employed to control carbide precipitation. Less than 50% of the overall contribution to strengthening is provided by the extremely tough Fe-Ni martensite, while aging of this martensite, containing Mo, Al, Ti and Co in supersaturated solid solution, provides additional strengthening by precipitation of nanosized intermetallic particles in the martensitic matrix.

Testing

All Osprey® metal powders are supplied with a certificate of analysis containing information on the chemical composition and particle size distribution. Information on other powder characteristics is available upon request.

Packaging

A wide range of packaging options are available, from 1 kg (2.2 lb) to 200 kg (440 lb)*.

Contact our team who can support you with selecting the right packaging for your product and application.

*Some packaging options may not be available for all products due to international shipping regulations.