

Datasheet Superalloys

# Osprey® 80A

Osprey® 80A is an age-hardenable nickel-based superalloy with a high chromium content and titanium and aluminium additions.

UNS

N07080

EN Number 2.4952, 2.4631

Powder designed for Additive Manufacturing (AM) Metal Injection Moulding (MIM)



## **Product description**

Osprey® 80A is an age-hardenable nickel-based superalloy with a high chromium content and titanium and aluminium additions. The alloy is developed for high-temperature applications in the aerospace, power generation (gas turbines), nuclear and automotive industries with operating temperatures up to 815°C (1,500°F). Osprey® 80A is an alloy of the same type as Nimonic® 80A\* with molybdenum addition.

This metal powder is manufactured by Inert Gas Atomization (IGA), producing a powder with a spherical morphology which provides good flow characteristics and high packing density. In addition, the powder has a low oxygen content and low impurity levels, resulting in a metallurgically clean product with enhanced mechanical performance.

\*Nimonic® is a trademark owned by Special Metals.



# Chemical composition (nominal), %

Last updated: Jul 19, 2023 11:52 AM CET

Ni	Bal.	
Fe	≤3.0	
С	≤0.10	
Cr	18.0-21.0	
Мо		
Al	1.0-1.8	
Ті	1.8-2.7	
Nb		
Со	≤2.0	
В	≤0.008	
Mn	≤1.0	
Si	≤1.0	
Р		
S	≤0.015	
Other	Cu ≤0.2, Zr ≤0.15, Pb ≤0.003	

## Powder characteristics and morphology


## **Powder for Additive Manufacturing**

Osprey® metal powder for Additive Manufacturing is characterized by a spherical morphology and high packing density, which confer good flow properties. For powder bed processes these are essential when applying fresh powder layers to the bed to ensure uniform and consistent part build.

For blown powder processes, such as Direct Energy Deposition (DED), good flow ensures



uniform build rates. Tight control of the particle size distribution also helps ensure good flowability. Low oxygen powders result in clean microstructures and low inclusion levels in the finished parts.

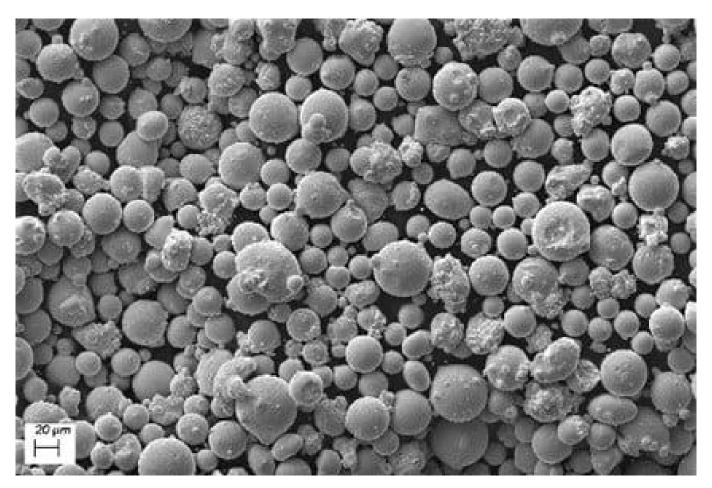

#### **Powder for Metal Injection Moulding (MIM)**

Osprey® MIM powder has a spherical morphology, resulting in high packing density. This enables the manufacture of feedstocks with high powder loading, which not only minimizes binder costs but also reduces part shrinkage during debinding and sintering. Spherical powder also has excellent flow characteristics, resulting in reduced tool wear and consistent mould filling.


Osprey® MIM powder's low oxygen content allows better control of carbon and consistency during sintering. Low oxygen levels, together with high packing density, also facilitate faster sintering.

#### Particle size distribution



#### **Powder for Additive Manufacturing**

Osprey® metal powder for Additive Manufacturing is available in a wide range of particle size distributions that are tailored to the individual Additive Manufacturing systems. They can also be tailored to the particular requirements of the end application, both in terms of mechanical performance and surface finish.

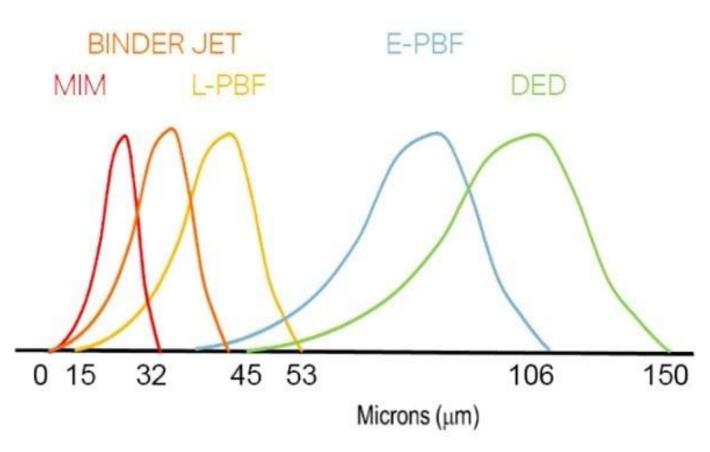

Process technology	Size (µm)
Binder jetting	≤ 16, ≤ 22, ≤ 32, ≤ 38, ≤ 45
Laser - Powder Bed Fusion (L-PBF)	15 to 53 and 10 to 45
Electron beam - Powder Bed Fusion (E-PBF)	45 to 106
Direct Energy Deposition (DED)	53 to 150

#### **Powder for Metal Injection Moulding (MIM)**

Osprey® metal powder for Metal Injection Moulding (MIM) is available in a wide range of particle size distributions, from under 5  $\mu$ m up to 38  $\mu$ m. The table shows our standard particle size distributions for MIM powders.



Size (µm)	D10 (µm)	D50 (µm)	D90 (µm)
≤ 38	5.5	13.0	31.0
≤ 32	5.0	12.0	29.0
80% ≤ 22	4.5	11.5	27.0
90% ≤ 22	4.0	10.5	22.0
90% ≤ 16	3.5	8.0	16.0

<sup>\*</sup>Particle size measurements performed using a Malvern laser particle size analyzer, typical D10, D50 and D90 provided.

Tailor-made particle size distributions are available on request. Contact us to discuss your specific requirements.

# **Testing**

All Osprey® metal powders are supplied with a certificate of analysis containing information on the chemical composition and particle size distribution. Information on other powder characteristics is available upon request.

## **Packaging**

A wide range of packaging options is available, from 5kgs plastic bottles to 250kg metal drums.

5 kg (11 lbs) Plastic bottles

6 kg (13 lbs) Plastic bottles

10 kg (22 lbs) Plastic bottles

20 kg (44 lbs) Metal cans

100 kg (220 lbs) Steel drums

150 kg (330 lbs) Steel drums

250 kg (551 lbs) Steel drums

All packaging materials are suitable for air, sea and road freight.





Disclaimer: Data and recommendations are provided for information and guidance only, and the performance or suitability of the material for specific applications are not warranted or guaranteed. Continuous development may necessitate changes in technical data without notice. This datasheet is only valid for Sandvik materials.

Datasheet updated: Aug 29, 2023 5:54 PM CET (supersedes all previous editions)

metalpowder.sandvik Contact us